User Guide

1:11 HDD Duplicator PRO

(HDU11SITDR)

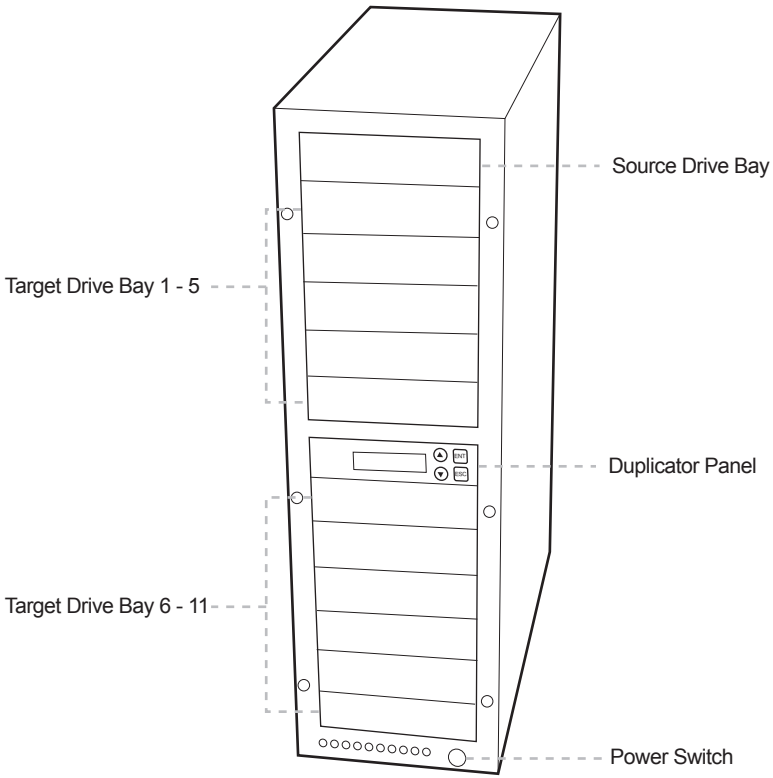

Note: Make sure that the capacity of the target hard disk is equal or larger than the source hard disk. For example, on the label of the hard drives, it might identify both drives as 80GB but the actual size differs. And when this type of drives are used on the HDD duplicator, when you start duplicating, you will receive a “Target Not Ready” error. To resolve this issue, you need to decrease the drive size of the source drive. To do this, navigate to: 6.Setup > 6.2Copy Size and use the button arrows to decrease the drive size of the source drive by increments of 1%.

Technical Support

If you need any assistance to get your unit functioning properly, please have your product information ready and contact Addonics Technical Support at:

Hours: 8:30 am - 6:00 pm PST
Phone: 408-453-6212
Email: http://www.addonics.com/support/query/

I. Installing Drive into the HDD Duplicator

For installing a hard drive on the various enclosures that come with the HDD duplicator, refer to the bundled enclosure installation guides.

Step 1

Once the hard drive is installed on the drive enclosure, slide in the Source drive into the drive bay. Push down the handle and using the key provided, turn the key lock to the Lock position. This will secure the drive and turn on the power to the hard drive.

Step 2

Slide in the Target drive into the drive bay. Push down the handle and using the key provided, turn the key lock to the Lock position. This will secure the drive and turn on the power to the hard drive.

II. Connecting the Power Cable and Powering On

a. Connect the power cord provided from the wall outlet to the back of the tower.
b. A main power switch is located at the back of the tower. Turn the switch on. Another auxiliary switch is located on the front of the tower.
c. Push the auxiliary switch button to turn on the HDD duplicator.

III. The Duplicator Panel

There are four buttons and an LCD on the panel of HDD Duplicator.
1 – LCD shows a function or a message.
2 – it is used to scroll up function menus.
3 – it is used to scroll down function menus.
4 – it is used to execute a function.
5 – it is used to cancel a function.

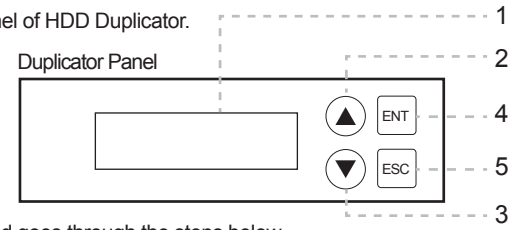

IV. Duplicating a drive

When the duplicator powers on, it initializes and goes through the steps below

Shows the firmware version

HD Duplicator 1-1 Ver:

Initialize SDRAM's status..

Initialize SDRAM

Detect Drives' status.

Detect Drives

Shows the first function:

1.Copy HD

Copy HDD copies data directly from the source hard disk to the target hard disk.

Press ENT button to begin copy. The system will auto-detect the hard disks and show the following info on the LCD.

Copy-36MBs 0% 235.7GB 1:48

The LCD will show the following info during the copying process: remaining time, completed percentage. The copy speed, capacity and time will vary depending on the source hard disk. Once the copying process is complete the LCD will display the following results.

Copy HD OK:

The complete user manual of the HDD Duplicator Panel can found in the Driver Disk under User Guides or can be downloaded from http://www.addonics.com/support/user_guides/